

# UNIVEST<sup>®</sup>

Insulation Systems


## HOW TO MEASURE DROOLSHIELD<sup>®</sup> HUB:




1. Measure the diameter of the nozzle.
2. Select the hub size based on the diameter:



1in- 2in

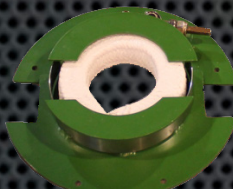

2in- 3in

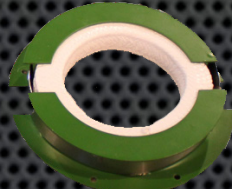


3in- 4in


## HOW TO MEASURE DROOLSHIELD<sup>®</sup> SHIELD:



1. Locate the nozzle resting point in the cavity.
2. Measure the diameter of the nozzle's position in regards to the cavity.
3. Select shield size — it comes with a 6in hub:

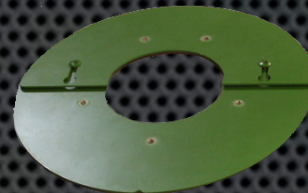

10in

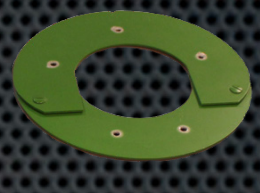


8in


**NOTE:** Round down to the nearest shield-size.  
(I.E. 9in diameter = 8in shield size)

## HOW TO ATTACH YOUR DROOLSHIELD<sup>®</sup>:


1. Assemble the shield onto the hub.
2. Insert PTFE Packing into the hub U channel.
3. Screw the shield onto the hub.
4. Loosen the clamp before fitting.
5. Slide DROOLShield<sup>®</sup> onto the nozzle and begin tightening the clamp. Tighten firmly.
6. The V indent on the edge of the shield must be positioned at 12 o'clock.

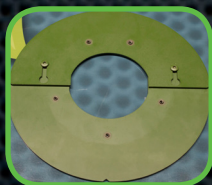

+

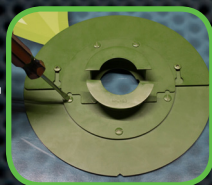

+

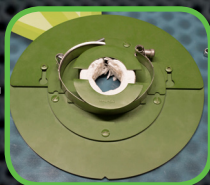

+



=

