

FREEZEPRO[®]

Frost Protection Systems

HOW TO INSTALL FREEZEPRO[®] TOTE & DRUM

Installing your FreezePro[®] Frost Protection Jacket to your selected application is very simple and much easier than you might think.

CLICK [HERE](#) FOR VIDEO TUTORIAL: HOW TO INSTALL FREEZEPRO[®] FROST PROTECTION SYSTEMS

WARNING: When installing or measuring for FreezePro[®], please follow all safety precautions and use proper and adequate protective safety aids such as: protective glasses and suitable protective clothing. Failure to do so may result in injury.

- 1. MAKE SURE THAT THE FREEZEPRO[®] FROST PROTECTION JACKET IS IN THE CORRECT POSITION WITH THE CENTER LOGO PIECE FACING UPWARDS:**



- 2. WRAP THE FREEZEPRO[®] FROST PROTECTION JACKET AROUND THE APPLICATION YOU WISH TO INSULATE:**





3. CONNECT THE BUCKLE IN THE MIDDLE AND SIMPLY TUG THE SLACK END OF THE STRAP TO SECURE THE FREEZEPRO® FROST PROTECTION JACKET IN PLACE: (DO NOT OVER TIGHTEN)




4. BUCKLE AND SECURE THE REST OF THE STRAPS IN PLACE: (DO NOT OVER TIGHTEN)






5. PLUG THE FREEZEPRO® FROST PROTECTION JACKET INTO THE NEAREST POWER SOCKET;

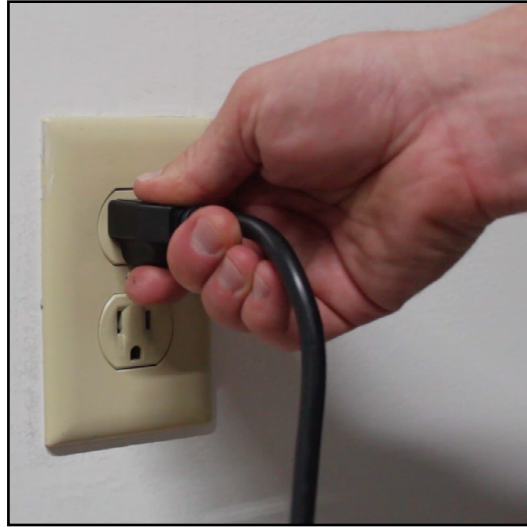

OR

(OPTIONAL) CONNECT THE MALE PLUG END (ATTACHED TO THE FREEZEPRO® JACKET) INTO THE RECEIVING FEMALE PLUG END (LOCATED ON THE CONTROLLER/THERMOSTAT) AND PLUG IT INTO THE NEAREST POWER SOCKET:

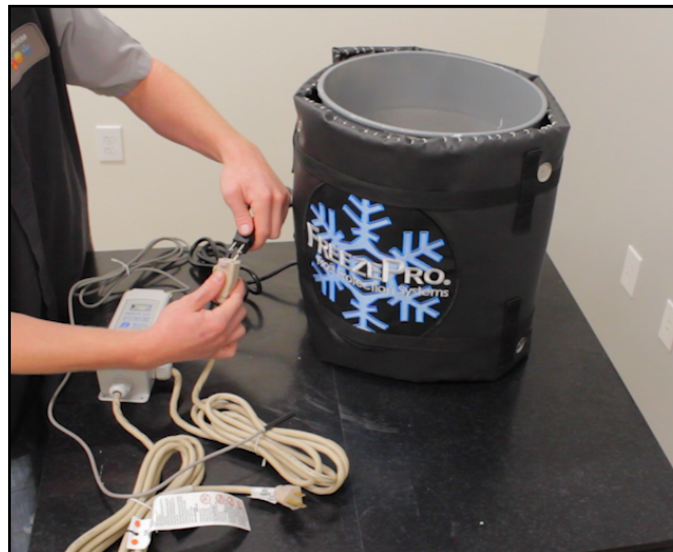



6. **(IF PURCHASED) PLACE THE FREEZEPRO® LID OVER THE APPLICATION. BUCKLE AND SECURE THE STRAP IN PLACE: (DO NOT OVER TIGHTEN)**



NOW YOU ARE READY TO START INSULATING!