



## HOW TO INSTALL FREEZEPRO® VALVE & WRAP

Installing your FreezePro® Frost Protection Jacket to your selected application is very simple and much easier than you might think.

CLICK [HERE](#) FOR VIDEO TUTORIAL: HOW TO INSTALL FREEZEPRO® FROST PROTECTION SYSTEMS

**WARNING:** When installing or measuring for FreezePro®, please follow all safety precautions and use proper and adequate protective safety aids such as: protective glasses and suitable protective clothing. Never use a metal tape for measuring purposes. Failure to do so may result in injury.

**TOOLS NEEDED:** WIRE CUTTERS, LACING WIRE, PLIERS & SAFETY GEAR




### 1. WRAP THE FREEZEPRO® FROST PROTECTION JACKET AROUND THE APPLICATION YOU WISH TO INSULATE:





2. TWIST THE END OF THE SS WIRE INTO A LOOP AND PULL OUT A SUFFICIENT AMOUNT OF WIRE. TRIM THE SS WIRE AT THE CYLINDER:

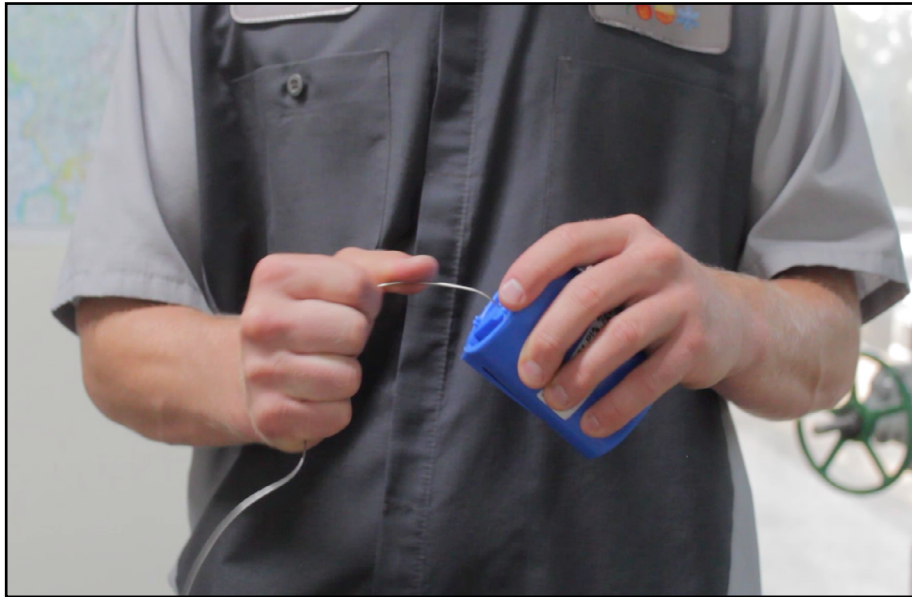

3. SECURE THE FREEZEPRO® FROST PROTECTION JACKET BY LACING THE SS WIRE BACK AND FORTH BETWEEN THE SS LACING HOOKS:





**4. TIE THE DRAW CORDS TOGETHER TO GIVE IT A SECURE FIT: (DO NOT OVER TIGHTEN)**



**5. PLUG IN THE FREEZEPRO® FROST PROTECTION JACKET AND YOU ARE READY TO START INSULATING:**

