

# FREEZEPRO<sup>®</sup>

Frost Protection Systems


## HOW TO MEASURE FOR YOUR FREEZEPRO<sup>®</sup> TOTE TANK

Selecting the right size FreezePro<sup>®</sup> Tote Tank for your equipment is a lot easier than you might think. All you need is a tape measure, and you are ready to go!

CLICK [HERE](#) FOR VIDEO TUTORIAL: HOW TO MEASURE FREEZEPRO<sup>®</sup> TOTE TANK

**WARNING:** When installing or measuring for FreezePro<sup>®</sup> Tote Tank, please follow all safety precautions and use proper and adequate protective safety aids such as: protective glasses and suitable protective clothing. Failure to do so may result in injury.

### 1. MEASURE FOR THE CIRCUMFERENCE:

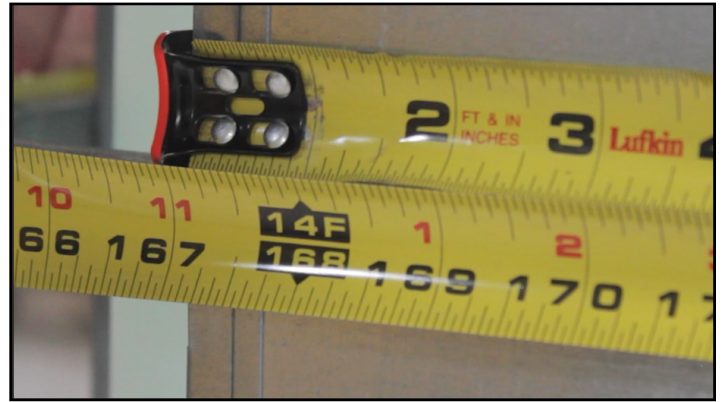

CIRCUMFERENCE

### 2. MEASURE FOR THE HEIGHT:



HEIGHT



### 3. FIND THE RIGHT FREEZEPRO® TOTE TANK:

FOR EXAMPLE: The CIRCUMFERENCE (length) is 167in and the height is 53in = **FPT 19254.**

## HEIGHT

CIRCUMFERENCE	42in (1067mm)	48in (1219mm)	54in (1372mm)	60in (1524mm)	66in (1676mm)
0in-192in (0mm-4877mm)	FPT 19242	FPT 19248	FPT 19254	FPT 19260	FPT 19266

**NOTE:** Now that you have your measurements, you can use the graph above to help you find the appropriate FreezePro® Tote Tank part number. Circumference (length) measurements are listed in the table rows vertically (Y axis) and height measurements are listed in the column rows horizontally (X axis).

### 4. FIND THE RIGHT FREEZEPRO® TOTE TANK LID: (OPTIONAL)

## WIDTH

LENGTH	40in (1016mm)	42in (1067mm)	46in (1168mm)	48in (1219mm)
42in (1067mm)	N/A	FPTL 4242	N/A	FPTL 4842
48in (1219mm)	FPTL 4840	FPTL 4842	FPTL 4846	FPTL 4848

**NOTE:** FreezePro® Tote Tank Jackets do not come with an insulated lid. FreezePro® Tote Tank Lids must be ordered/purchased separately. FreezePro® Tote Tank Lids also fit certain sizes so make sure you are buying the right size for your FreezePro® Tote Tank Jacket.